
720 Using Instructions

V.09

WIFI module edition: STK3350_M01

WIFI firmware edition : 1.2.0 Build 1263 (Apr 25 2013)

STK2269 module edition: V2.0

STK2269 firmware edition : 13.03.27.11.ER

PC terminal software edition: 13.04.18.01.RR

Android terminal software (STK viewer) edition: 13.04.07.01.ER

Catalogue

1.STK3350 Easy Connection configuration

2.point to point direct video function

A: PC terminal

B: Android terminal

3.Outside network remote video functions

A: Android terminal

B: IOS terminal

C: PC terminal

4.Intranet multi-screen function

1.Easy Connection configuration

To realize the network remote video functions setting should be set the STK 3350 module configure as AP client and start easy connection setting:
 First login on Web Page input in web add as : HTTP://10.10.10.254
 Then enter in to parameter configuration: STK3350+2269 factory default configure as AP Client model , so Operation Mode no need configure,only “Wireless Setting — AP-Client” to be configured needed

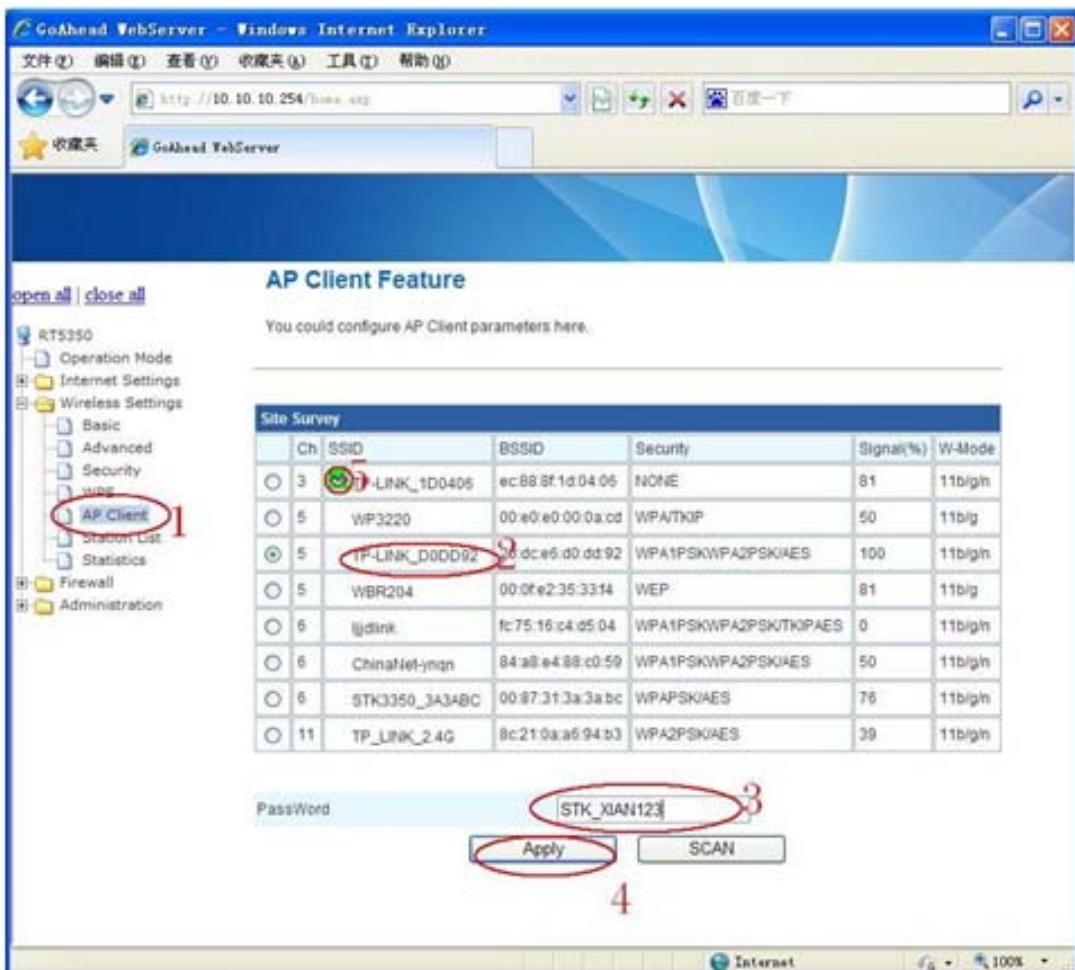


Chart 4

Chart 4: 1.Enter in to AP Client

- 2.select the needed wireless router, for instance: SSID for TP-LINK_D0DD92 wireless router
- 3.input the password for wireless router.
- 4.click Apply

Above setting been completed, router will reconfiguration,wireless connect cut off, wait for reconfiguration ,checking setting(chart 5), if being connected ,there will be a small green icon (chart 5),or please make sure if it's the right password inputted.

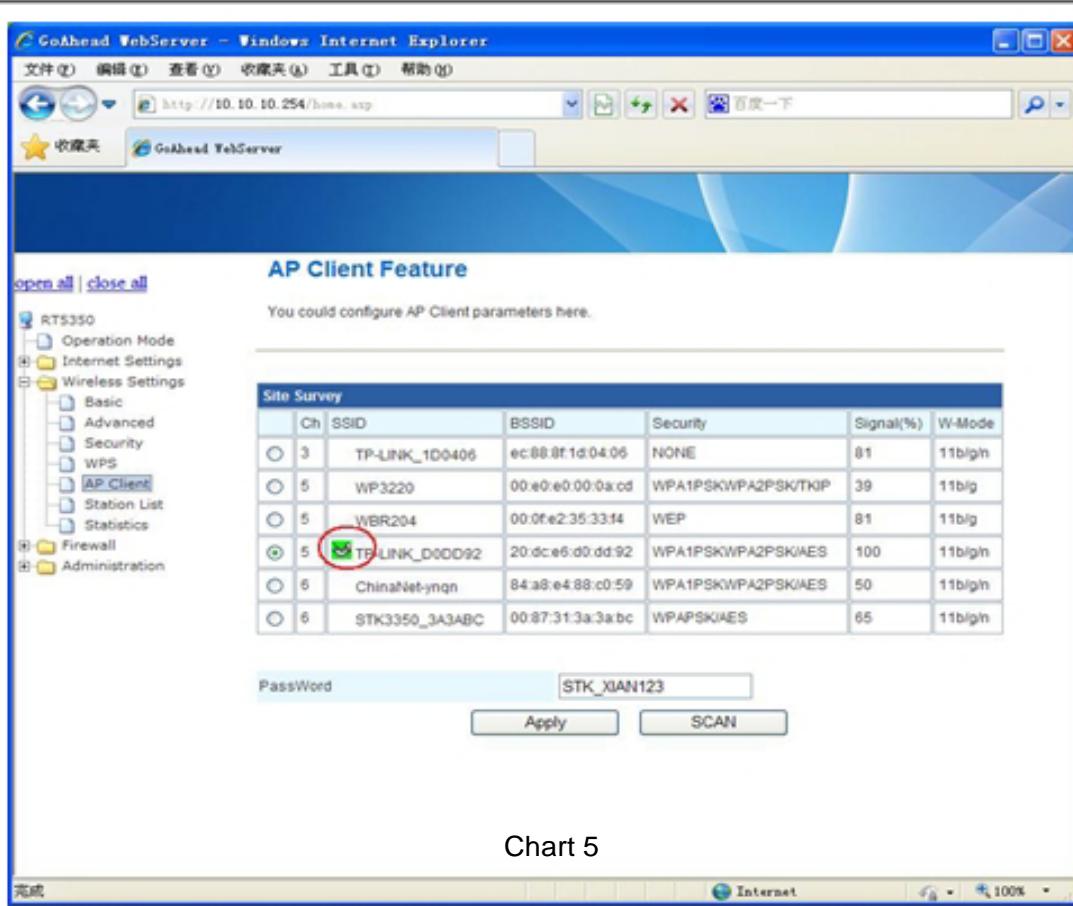


Chart 5

Can also be through a web connection page, check Easy Connection configured succeed or not. chart.6. Internet

Configuration WAN IP ADDRESS, IP display, indicate Easy Connection connect well.

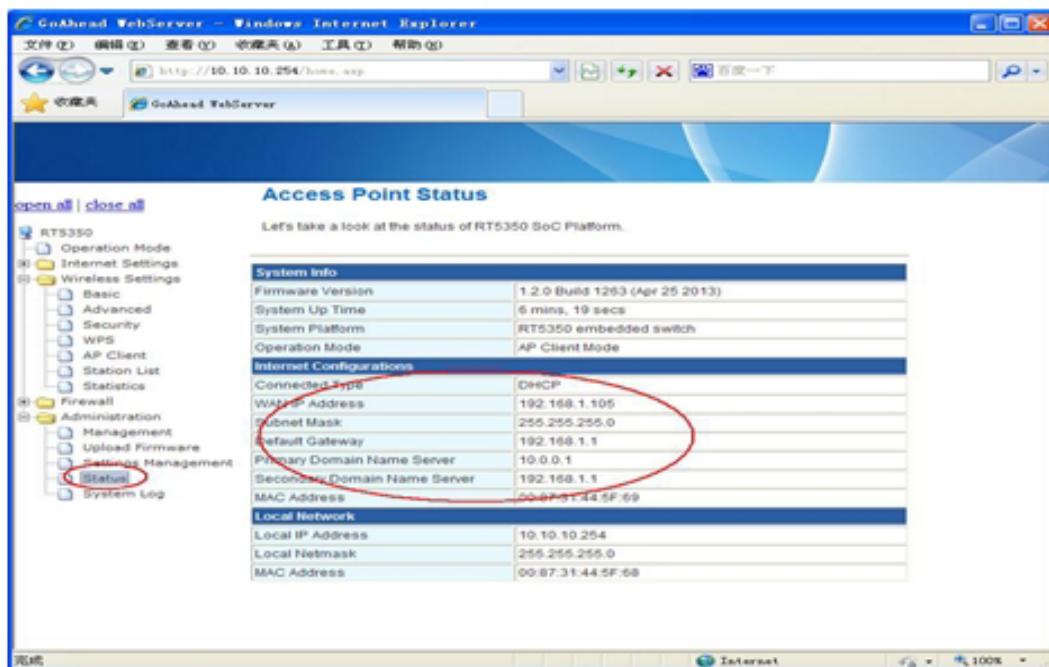


Chart 6

2.Point-to-point direct video function

First, open the wifi on mobile ,connect to STK3350 module, default wireless connect password: 88888888.

1.PC point to point application.

Run STK 的 PC terminal webcam Client.Exe, view the chart 7 as follows,

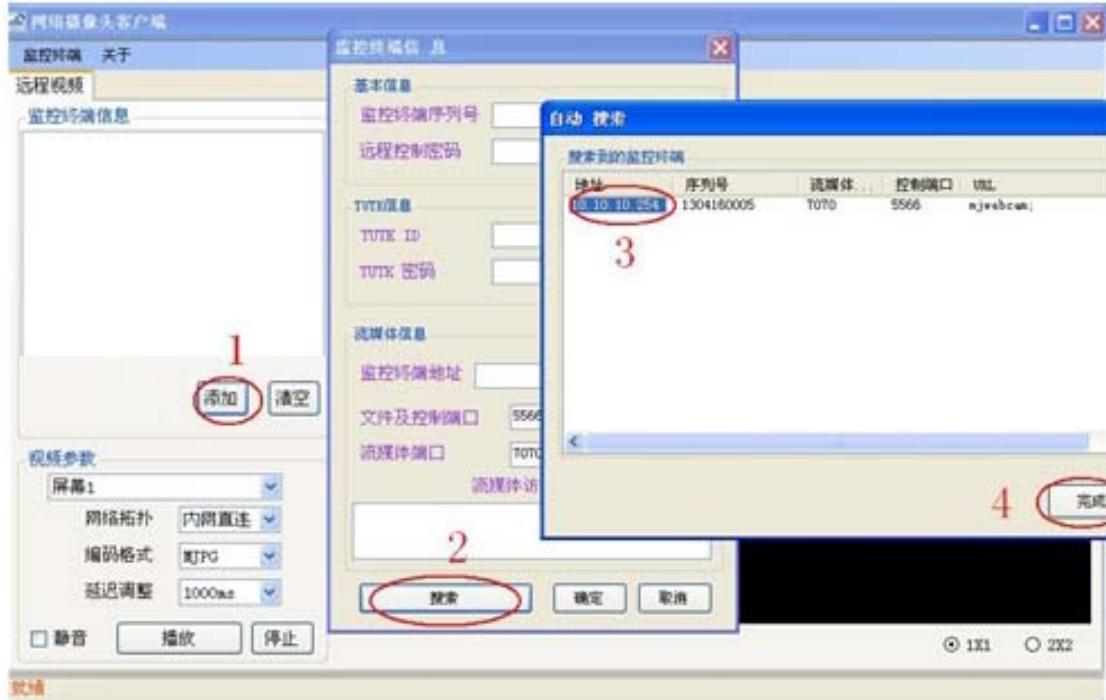


Chart 7

Click accordingly

- 1 ADD
- 2 Search
- 3 click address
- 4 complete

After being finished , shows as chart 8 below



Chart 8

1. Input remote control password, default as admin.
2. confirm

After complete ,will come out as chart 9 shows:

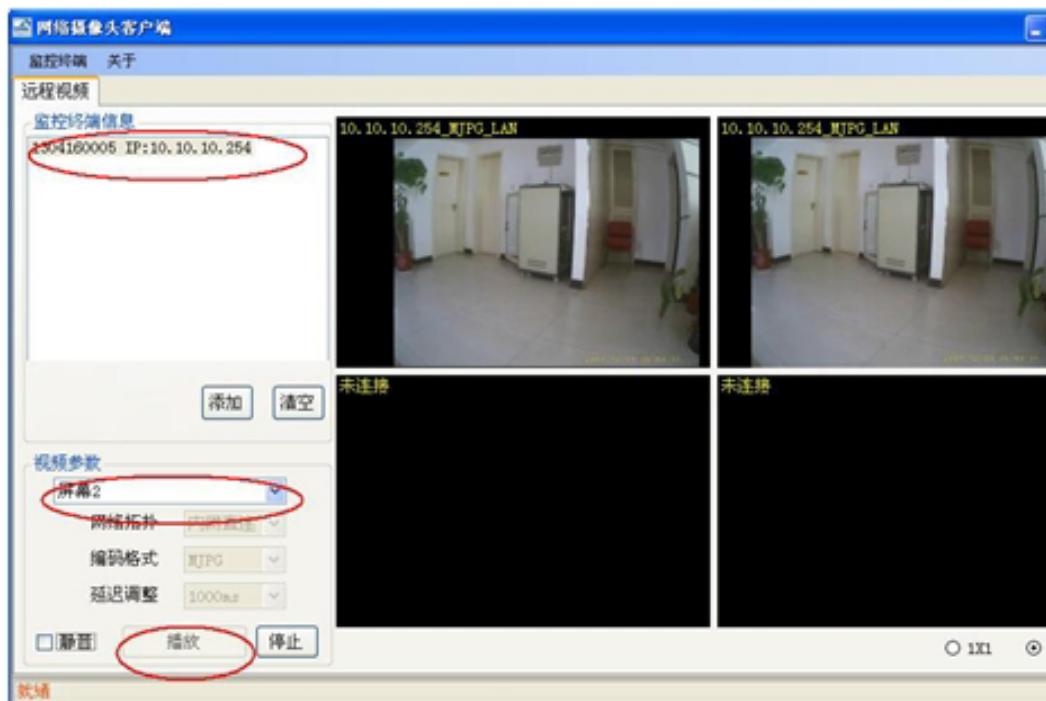


Chart 9

Select the monitor terminal accordingly, display screen position , pictures support max to 4pcs.network topology use intranet connecting directly.then play , get a view. If single click the IP by right key of mouse will popup as chart 10 shows: remote document,remote control and configuration

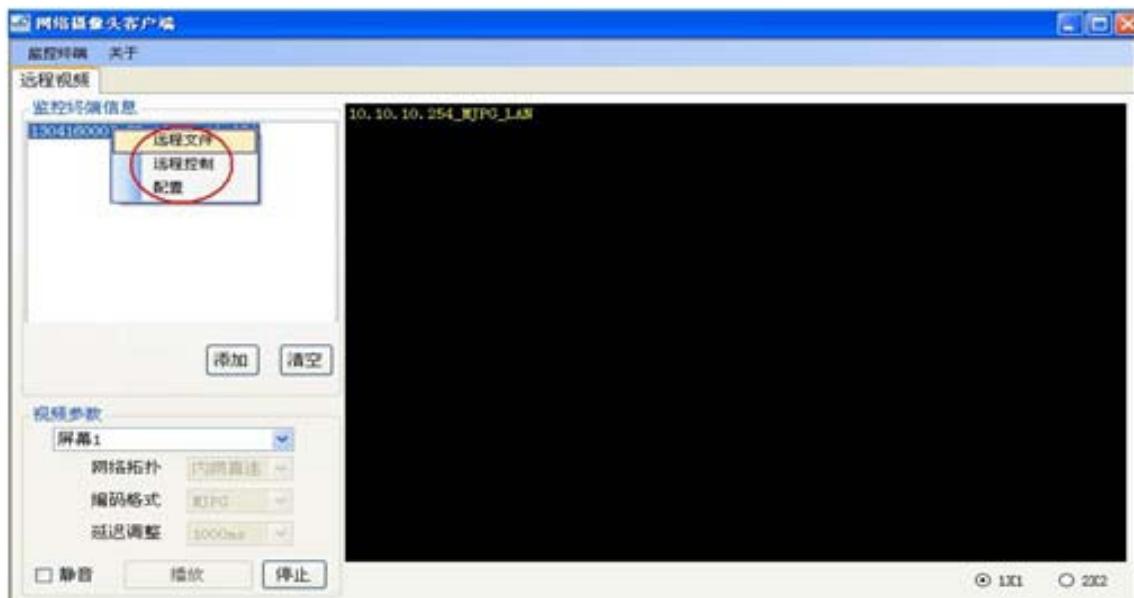


Chart 10

Click on remote document, will check the digital document stored on SD card ,to start a operation for preview and down load. (chart 11)

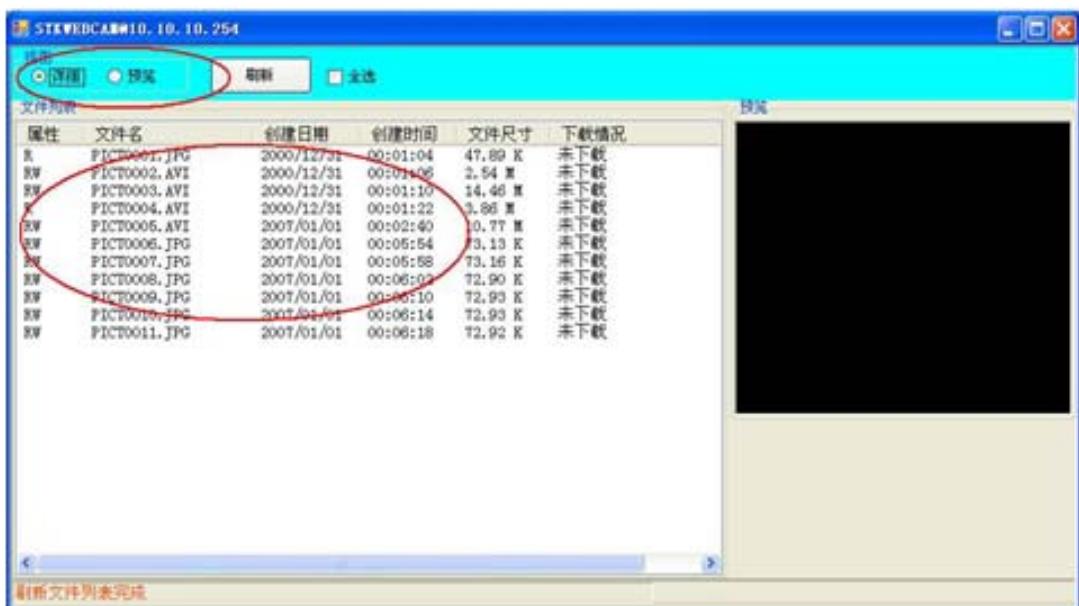


Chart 11

If click remote control setting, there will be chart 12.displayed




Chart 12

Picture illustrate: totally 11 for setting ,can be remote control according requirement.


2.Android point to point application

Connect mobile to WIFI STK3350 equipment.

Then download and install RtspActivity.apk, Through by Bluetooth,WIFI ,Mail copy the installation package to mobile to perform the installation , after completed run STK Viewer shows the interface as follows;

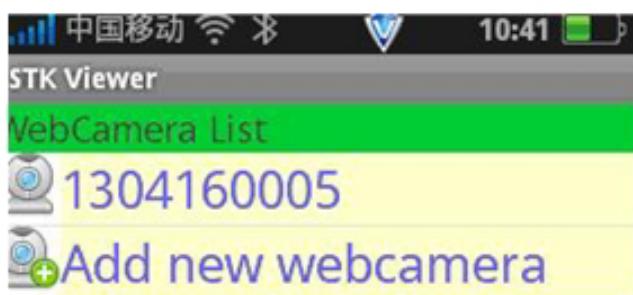


select Add new web camera,popup to following pictures;

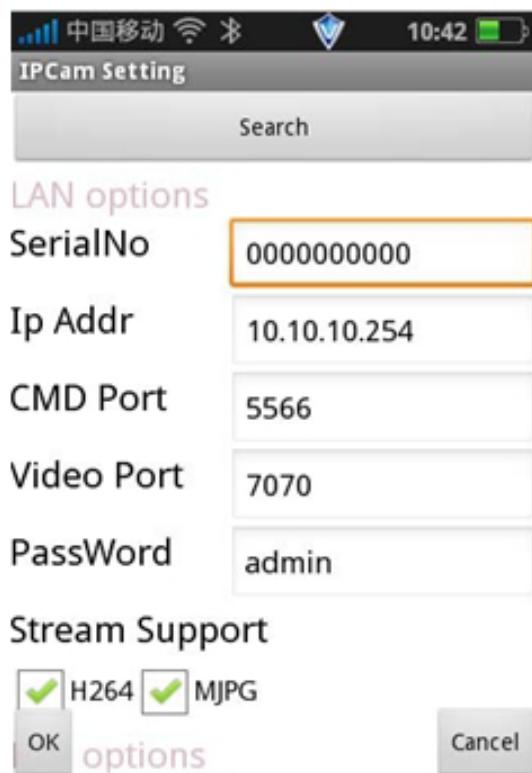

Click Search, OK

Select the increased camera, choose MJPG, can get a view

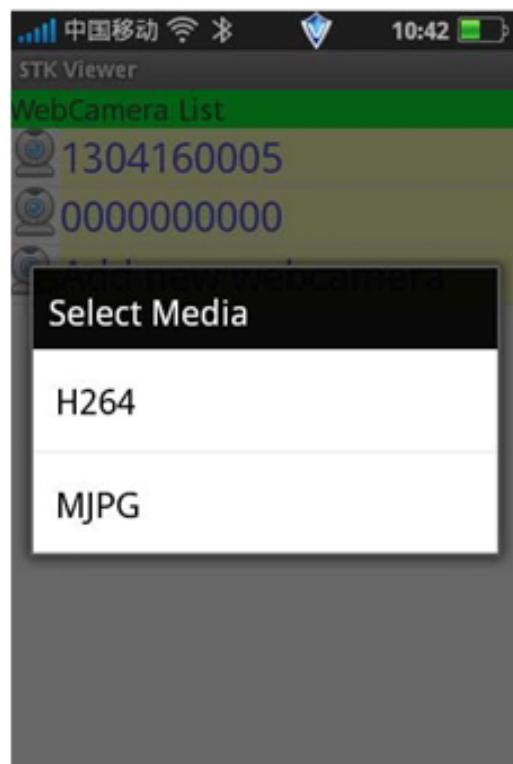

3.External network remote video functions

To achieve view from outer- net remote function should be:

1. STK3350 module set as AP client model and through Easy Connection to internet.
2. Terminal (PC or mobile) connect to internet.
3. STK3350 built in outer internet connection for TUTK number

A: Android terminal

login Google play down load and install P2Pcamlive software, running software will shows 15:



chart 15

select increase camera as shows chart 15 on right side above,

1. UID 20 numbers of TUTK UID, scan or input the two dimension code.
2. default password : 888888
3. confirm.

Can get a view as chart 16.



chart 16

B: IOS terminal

APP store down load P2PCamlive software and running will shows as chart 17.



Chart 17

Click increase, as picture 18, in put TUTK UID and password (default 888888) ,then click icon will shows chart 18:

V 0.9



Chart 18

C: PC terminal

If STK3350+2269 with TUTK function, then can connect to STK equipment in outer- net .

First run webcam Client.Exe, as picture 18 shows, mark with steps, first increase, then input monitoring number, remote password: admin ;TUTK ID: input by hand or scan, TUTK password: default:888888 ; monitoring terminal address : 10.10.10.254

After setting complete, click play can get view.

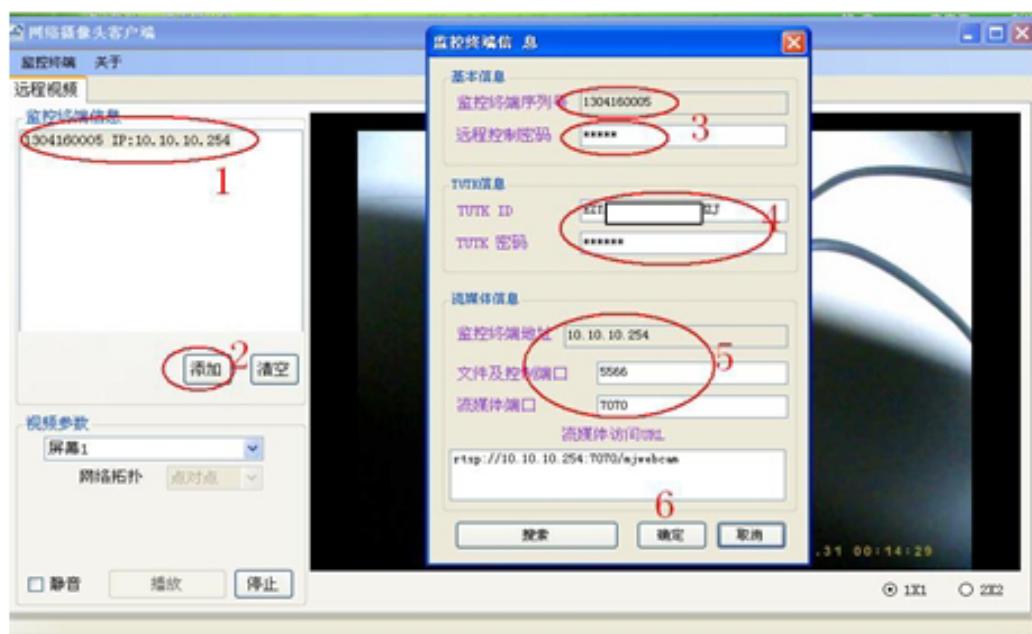


Chart 19

4.Intranet multi-screen function

To reach intranet multi-screen function should be:

- 1.STK3350 module set as AP client model and passed by Easy Connection connect to same router.
- 2.Remote review side (PC or mobile) connect to wireless router.

PC terminal application

open webcam Client first, click searching, will see multi-terminal as shows chart 20 increase accordingly.



Chart20

shows as chart 21.

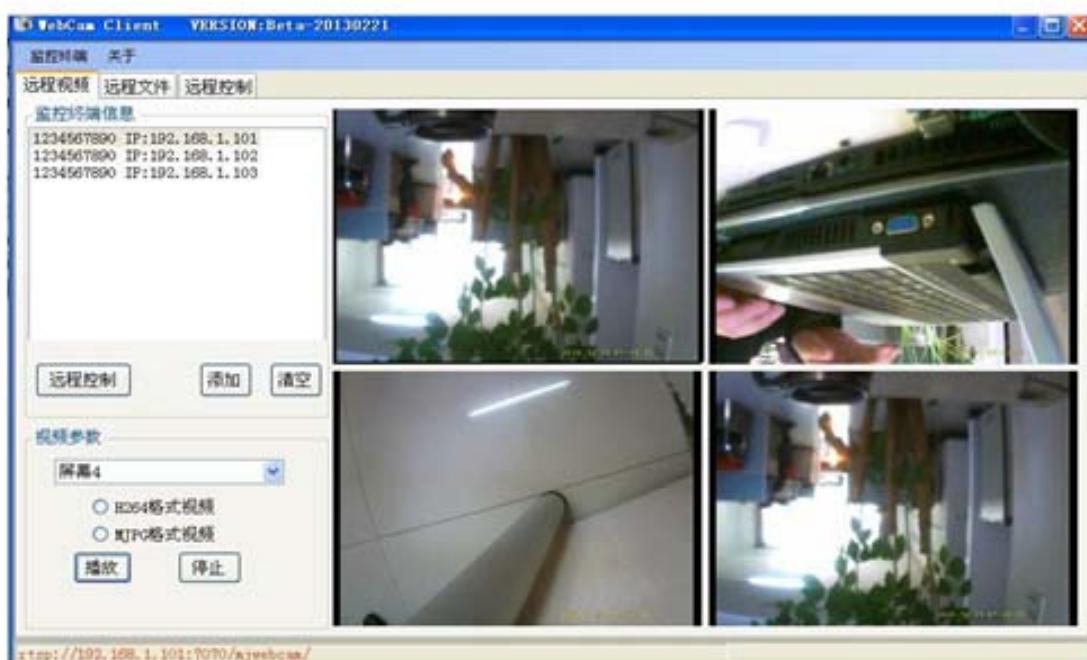


Chart 21