

Operation:

1.Photo Mode : Move the Mode Switch to the Right Side,long time press the Function Button,it will open the machine and enter into photo mode,you will see yellow light will keep on all the time,then press the Function Button once,the yellow light will flash a time,it means take a photo and saved,long time press the Function Button a again can close the machine;

2.Video Mode : When you opened the machine and entered into photo mode,just need to move the Mode Switch to the Left Side,it will enter into video mode automatically,you will see the yellow light changed to blue light,it means recording video,if you want to stop recording video,just press Function Button once,you will see blue light changed to yellow light,in this situation,then long time press Function Button can close the machine.

Attention : (Pls confirm Mode Switch is Photo Mode or Video Mode before open the machine,suggest customers can move to Photo Mode firstly,then open the machine,it is better)