# Smart doorbell User manual





Smart doorbell connects WiFi or network cable. After visitor presses Call button, Smart phone interacts with doorbell via real time video, full duplex talk, take photos, take videos, Indoor doorbell ring and remind the user.

Smart doorbell connect the Electric Lock directly or by unlock control. Smart phone and remote control, RFID card can unlock. User can monitor the gate via phone anytime anywhere.

### 1 APP introduction

- APP's name is Yoosee, free for Android and iOS both.
- A) Download APP at http://www.yoosee.co B) Search "Yoosee" from APP store or Google Play Store according to phone system
- Note: Select 'Only iPhone' on iPAD C) Scan QR code to dowload and install
- Window software download at http://dl1.cloudlinks.cn:8765/dl/exe/CMSsetup.exe













### A) Pair indoor doorbell with smart doorbell

Indoor doorbell and smart doorbell connected to power adapter both. Firstly press "Volume" button of indoor doorbell until the light on, then loosen and the light go out; Press "Call" button of smart doorbell first time, the light of indoor doorbell flash one time, then press "Call" button of smart doorbell again, indoor doorbell flash about several times, it means that pairing is successful. Long press "Volume" button of indoor doorbell, the light from continued flash to go out,

clear code after loosen.

### B) Pair unlock control with smart doorbell

Unlock control and doorbell are connected to power adapter both. Firstly press "Call" button of doorbell, smart phone run the app to answer and enter talk state, press "Pair" button of unlock control, then click "Unlock" button of APP, so pair light continuously flash. Once again press the "Pair" button of unlock control, pair light stops flash. Finally click "Unlock" button of APP, the pair light flash several times, it means that pairing is successful. C) Pair remote control with unlock control

Unlock control is connected to power adapter. Firstly press the "Pair" button of unlock control, pair light flash one time. Press the "Pair" button of remote control, pair light continuously flash. Once again press the "Pair" button of unlock control, pair light stops flash. Finally press "Unlock" button of remote control, the pair light flash several times, it means that pairing is successful.

#### RFID Card Settings A) Setting Management Card

Click @ enter "Settings"

Other and Time

 
Media Settings

Security Settings

Network Settings

Alam settings

Standard: Add card x1, Delete card x1, User cards x5. DIP switch 3 in the "OFF" position default



Date and Time: Set date and time, Default is

Media Settings: Video format PAL&NTSC,

1 Admin password: Reset device password

The volume is send to phone from the doorbell.

synchronized with the network

Default 3 in the OFF 3 in the ON enter settings

Enter setting state of management card, at this time the red and blue lights alternately flash. Blue light off and the buzzer ring one time after swipe the first card, the card is Add card. Red light off and the buzzer ring one time after swipe the second card, the card is Delete card. Management card settings completed. Then power off, put 3 return to "OFF" position, then connects smart doorbell to power adapter again. B) Delete Management Card

Firstly swipe Delete card one time, once again swipe add card, finally swipe a target delete management card and deleted all user at the same time. C) Add user card

Blue light on after swipe the Add card one time, once again swipe one target user card, the buzzer will ring one time after successfully added.

Repeat to add, select continually and swipe the target add card one time. Once again swipe the add card to exit the adding states.

 D) Delete user card Red light on after swipe the Delete card one time, once again swipe one target delete card,

buzzer will ring one time after successfully deleted.

Repeat to delete, select continually and swipe the target delete card one time. Once again swipe the delete card to exit the deleting states.

Can not delete if the card not added or deleted already, can not add if the card added already. Add card or the swipe user card to unlock successful then the blue light flash one time. Delete card successful and swipe the card make mistake then the red light flash one time. Buzzer ring one time that is mean work normal;

Buzzer ring three times that is mean wrong card or operation mistake;

Alarm push ID

Alarm Email

Motion Detection

2 Features

Video format

Record mode

Camera Lens

Night vision

Frame rate

Data interface

Power adapter

Waterproof level

Temp/humidity

Weight

3 Parts

Alarm

Push

Camera

External Memory

Cloudlink P2P transmission, Adaptive Network

3Dvoice speech engine technology, Full duplex talk

G.711 A compression mode

Micro SD card up to 128GB

-20~55 C 10-95% RH

Rain cover

Camera

IR Leds

Photoresistor

Swipe Area of

"Call" button/Led

PIR sensor

ID Card

Speaker

Music

Light

G.W.: 650g

2.5mm, 130 degree wide-angle

1 megapixels

WiFi 802.11 b/g/n or directly connected to a wired network

Manual Recording, Alarm Recording, Scheduled Recording

IR CUT no color deviation, B/W night vision within 5meters

25 Frame HD (1280\*720), SD (640\*480), LD(320\*240)

Push message to smart phone, Send pic to settings mail.

TCP/IP, UDP, SMTP, DHCP, UPnP, ONVIF connect NVR

Power port-

Unlock port

Access port

RJ45 port

Volume

Set ID Card and unlock delay time

DC9~16V 1A or POE power by connect POE injector


Motion detection, PIR detection, Tamper alarm


Server


Audio

Talk

Network

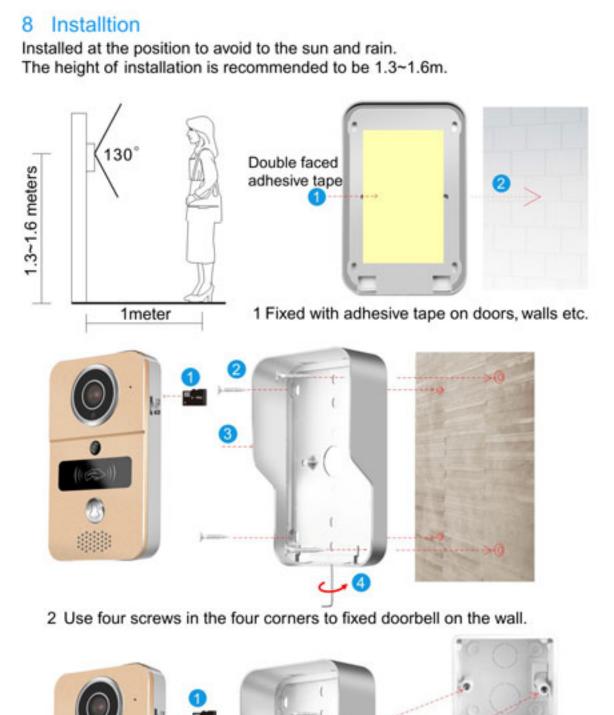

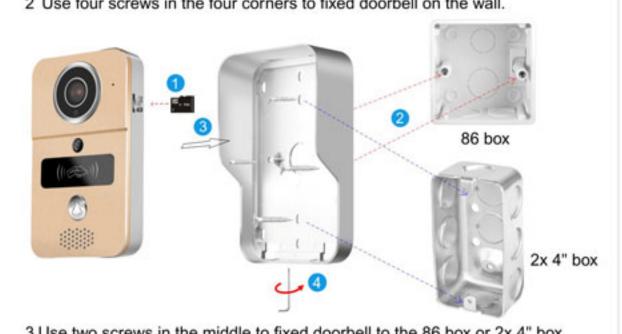

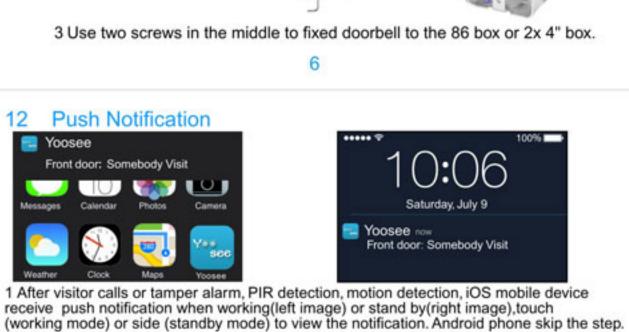

Front door

3 After answer, take photo, full duplex talk,

touch " will enter the following interface

 $\bigcirc$ 

Photo Unlock

Input device password to unlock

Hang up Back

Sound/ Talk

10

Arm/

Disarm Mute

Cam3541241

Device: 3541241

Somebody Visit

🔞 - • • • (O) • • • • • 🕞

20 16-07-09 09:41:29

2 Slide to right answer,

slide to left hang up

HD

HD=high definition

LD=fluent

SD=standard definition



Security Settings:

1 Receive alarm: Enabled by default, if disabled, user will not receive call from visitor,

alarm of motion detection and PIR detection 2 Alarm push ID: supports up to 5 user ID, user ID display can receive push, delete not

receive push, the user ID can check in the system settings 3 Alarm Email: will push alarm image to setting email


4 Motion Detection: will push alarm of motion detecti to phone if enabled, can't receive alarm if disabled.

5 Buzzer: User can set ring 1, 2 or 3mins if enabled, in case you feel danger or threat from your door that need for warning. Will troubled noise for neighbors or visitor. 6 PIR detection: Enabled will be sensed visitors within 3meters, it's enabled or disarm,

#### can't push messages to mobile device Note: Enable/Disable alarm are valid of all phones


# Recording Settings:

- 1 Manual Recording: Turn on to start recording, turn off end recording
- 2 Alarm Recording: After alarm include PIR detection, motion detection, tamper alarm, somebody visitor are issued to the end of recording within a set period of time. 3 Scheduled Recording: Select a period of time to record
- All video files saved in the SD card, Display the capacity, the remaider capacity of

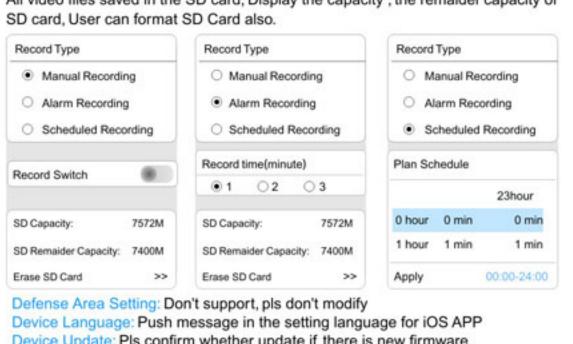

Device Update: Pls confirm whether update if there is new firmware



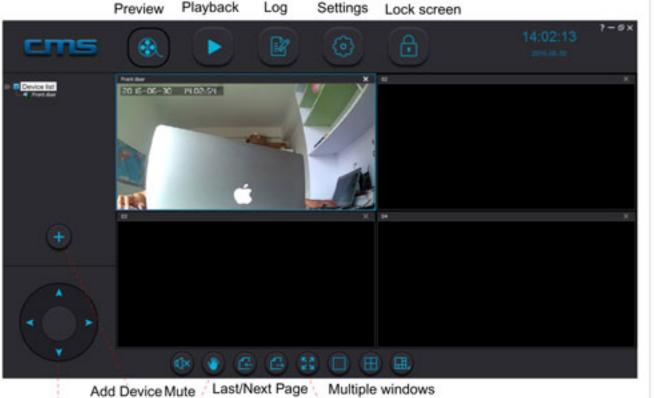

No this function No this function Full screen

Click "Manual add device" If can not find the device automatically, Input device information to add. Click "<<" if remove the device Device manager

4 Accessories

Powrer adapter

POE injector

Militarios Printerios

Militarial School

1 Register & Sign

By Mobile

+1

DC Cable

5 Network connection and power supply

3 Network cable available but no power, power with POE

9 Add doorbell into mobile device

1 Click "Register". Forgot password via phone or mail to reset.

2 Select phone or email, Click "Next", choose the country if by mobile

3 Follow the prompts to complete the registration, click {...} can see the ID

A) Connects WiFi within 5mins and confirm the phone connected 2.4G WiFi

Add New Device

lower on, wait for connection sound

from camera; if you do not hear the connection sound.

lease reset it
Can not hear the prompt tone?

Add New Device

Waiting for connection

1 After doorbell power on, user will hear voice prompt if not connected to WiFi or network

2 Click "+" on the top right and select "Smartlink", click "Next" after heard the prompt tone.

4 Input wrong password can not connect, connection success will shown "Setting Success!"

Note: Router should be placed close to the doorbell. Try to less metals, less brick walls

B) Mobile phone and doorbell in the same LAN, do not turn off router's DHCP function

New device list

A 364/241 192/98.31.157

2 Click+

3 APP auto identify phone's WiFi SSID, input correct password, Click "Next"

5 Edit doorbell name and input password then click "Save"

between doorbell and router, doorbell will get better WiFi signal.

Power On

By Email(D)

America

2 Add doorbell to APP

Device list +

Device list +

1 Click "Discover 1 New device"

Here is empty So take action now to add device

4 No power and network cable, power with POE

Doorbell's power and network connection selection, please refer to:

ensure that the doorbell received signal strength is higher.

1 Power and network cable both available, plug the network cable and power.

2 Power available but no network cable, plug the power and connect to WiFi, try to

₹ 0

Length Max 50meters

Providing power and wired network

Unlock wiring

Screwdriver Screws and stopper Adhesive tape

Unlock control Remote control Indoor doorbell

Access wiring

5\* Blue User cards 1\* Red Delete card

1\* Yellow Add card

MicroSD card

Router

◆ Add New Device

Please input will password

3541241

Please input device password

Wi-Fi SSID

3541241

3 Input device name and password

Router

..

 
Device added NO. 3C ID Device name Group mame Manual add advice Ext

Enter settings user can modify the save path of video, whether clyle record, auto start recorde when monitoring, Connect all of devices automatically.


Param User File save path Record time for package Auto start record when monitoring Close Connect all of device automatically

Start Stop Right-click on the selected device, User can change clarity of video recording, Know about the network configuration PC Config Front door

Connect Type WiFi Obtain IP address autoatically Use the following IP address IP address 192,168,31,157 Subnet Mask 255.255.255.0 192,168.31.1 DNS 192,168,31,1 Get parameter successfully Refresh Set




Power on wiring diagram

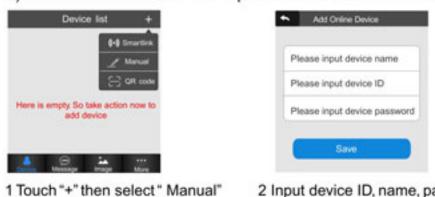

COM connections are the same, Different are connected NO or NC.

2 Input device ID, name, password then touch "Save"

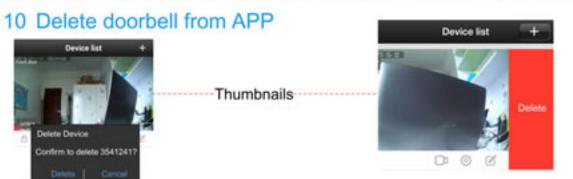

Android: Long press thumbnails to popup the dialog

11 APP menu introduction

6 Unlock Settings

Note: Electronic lock and Access control are no polarity, unlock voltage is 12V, Pls

User use12V/1A power adapter or POE power if don't need to connect the lock.

B) Wiring diagram of connect double power adapter, POE can replace 12V/1A power adapter

48

Power off wiring diagram

Power off wiring diagram

Power off wiring diagram

88

check the spec of unlock power to purchase separately.

A) Wiring diagram of connect single power adapter

Power on wiring diagram

Power on wiring diagram

Position

Delay time

18

C) Wiring diagram if connect unlock controller (optional)

...

Disarming Arming Playback Set Edit Device password wrong 1 & Device: Device list. Click to enter the home page. Will not receive push message of motion detection and PIR detection

Phone will receive push message of motion detection and PIR detection icon to view the video file of that day, last three days, all and over time.

Click thumbnails to monitor status of gate

Offline: Network delayed or device not connected

2 
Message: Visitor calls and alarm records, user can delete a single or bulk delete also. 3 image: Browse and save to Albums, user can delete a single or bulk delete also.

System Settings 4 ... More: Click to enter System Settings UserID Email, Phone, user password. My Account About: APP description and current version information Settings Settings: Set alarm and call ring and modes, notifications

C Update icon, auto reboot for Android APP System Notification Update: Android APP version to update About Sign out @ Exit

iOS APP without settings: Settings, Update, System Notification

Suggest to Android APP log in the background all the time

## 14 Troubleshooting

1 Q Doorbell cannot connect to WiFi

A 1 Confirm WiFi password is correct 2 Doesn't support 5G WiFi 2 Q When adding a device, APP don't prompts have new device

A Please check doorbell and smart phone whether within same LAN,

please manual to add if it's not same LAN.

3 Q Prompts wrong password for the smart doorbell A Click on a correct into to correct password, Press 'Reset"button of doorbell 5s

if forgot password to add the doorbell to APP

4 Q Doorbell show offline

A Confirm connects network cable or WiFi successful

5 Q MicroSD card can't recording and covering?

A 1 Check MicroSD card or has damaged 2 please check search the time of video files, system time of doorbell

6 Q The difference between user ID and doorbell ID A User ID is registered generated, Doorbell ID is its own identification number

7 Q The difference between user password and doorbell password A User password is registered setting, Doorbell password is APP connect the

doorbell to setting 8 Q The difference between edit and modify management password

A Editing means input wrong or other users changed the newest password, Modify

in setting, means reset a new password

9 Q After visitor calls, Android only shock without ringing? A No. Touch "More..." to selects system settings call and alarm rings

10 Q Can't receive visitor calls

A 1 User ID is not in the alarm account

2 Make sure Android APP in the background and connects WiFi or 3G/4G

3 Push messages to iOS, touch it will enter above interface

4 Receive alarm must be enable. Receive Alarm

11 Q How to delete the others alarm push account?

A Setting->Alarm setting-> In front of alarm push account have delete icon to deleted, then phone can't receive push messages 12 Q Push email password is the email password? A No. Input App Password. For example gmail mailbox, An App password is a 16-digit

passcode that gives an app or device permission to access your Google Account. If you use 2-Step-Verification and are seeing a "password incorrect" error when trying to access your Google Account, an App password may solve the problem.

Note: If you have iOS 8.3 on your iPhone, you will no longer have to use App passwords to use 2-Step Verification. How to generate an App password 1 Visit your App passwords page. You may be asked to sign in to your Gmail Account.

2 At the bottom, click Select app and choose the app you're using. 3 Click Select device and choose the device you're using.

4 Select Generate.

5 Follow the instructions to enter the App password. Note: You may not be able to create an App password for less secure apps. Learn

more about allowing less secure apps. Pls check your mail help input App password.

12

11

Click . click convert the av files to mp4 files;

Save path

Device All device ▼ Size Progress

iOS: Slide to the right to delete 

Edit doorbell name as Front door etc., edit here if password is wrong.

Account Info: User can view ID, Email, Phone and can modify

System notifications: Important notices tips of Android APP Exit: Phone can't receive alarm and call if exit Android APP,