
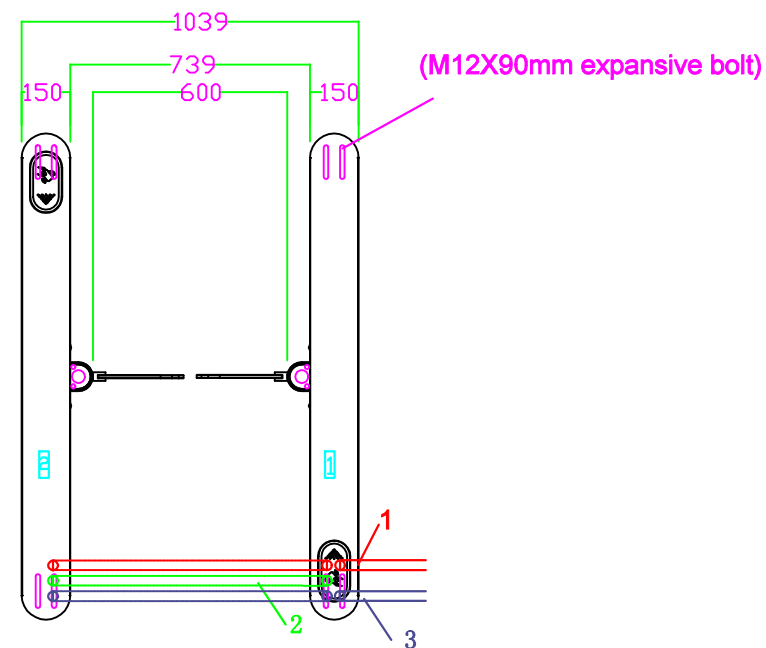
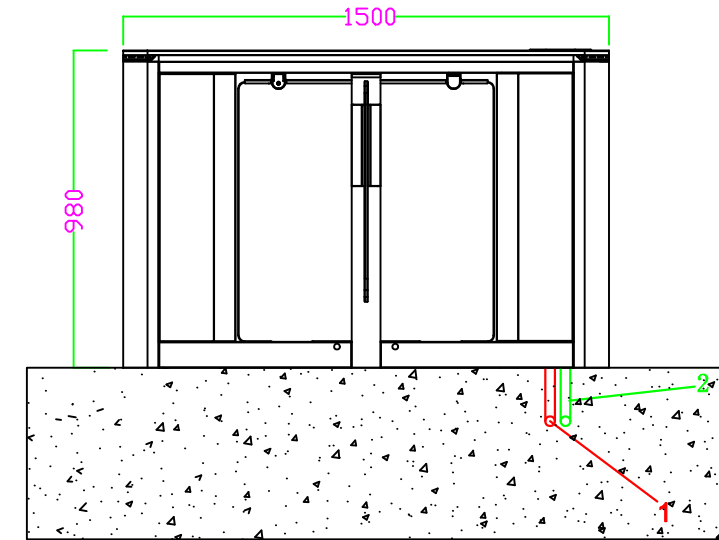


Unit : mm

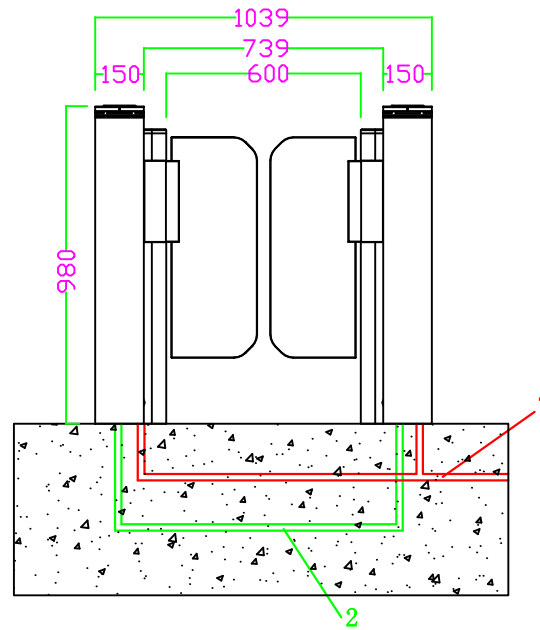


Installation Manual:


- 1 || The Ø20mm PVC tube for AC 220V Power wires(3 X Ø2.0mm).
- 2 || The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables*2PCS, 2 * 1.0mm Power wires*1PCS) .
- 3 || TCP/IP ethernet cable for connecting access device to PC.
- 4 || 1.Master servo motor driver,2.Vice- servo motor driver.
- 5 || Fixing the equipment with M12 X 90mm expansive bolt .

Mark:All wires extending out of the ground shall be no less than 2M.


600 mm

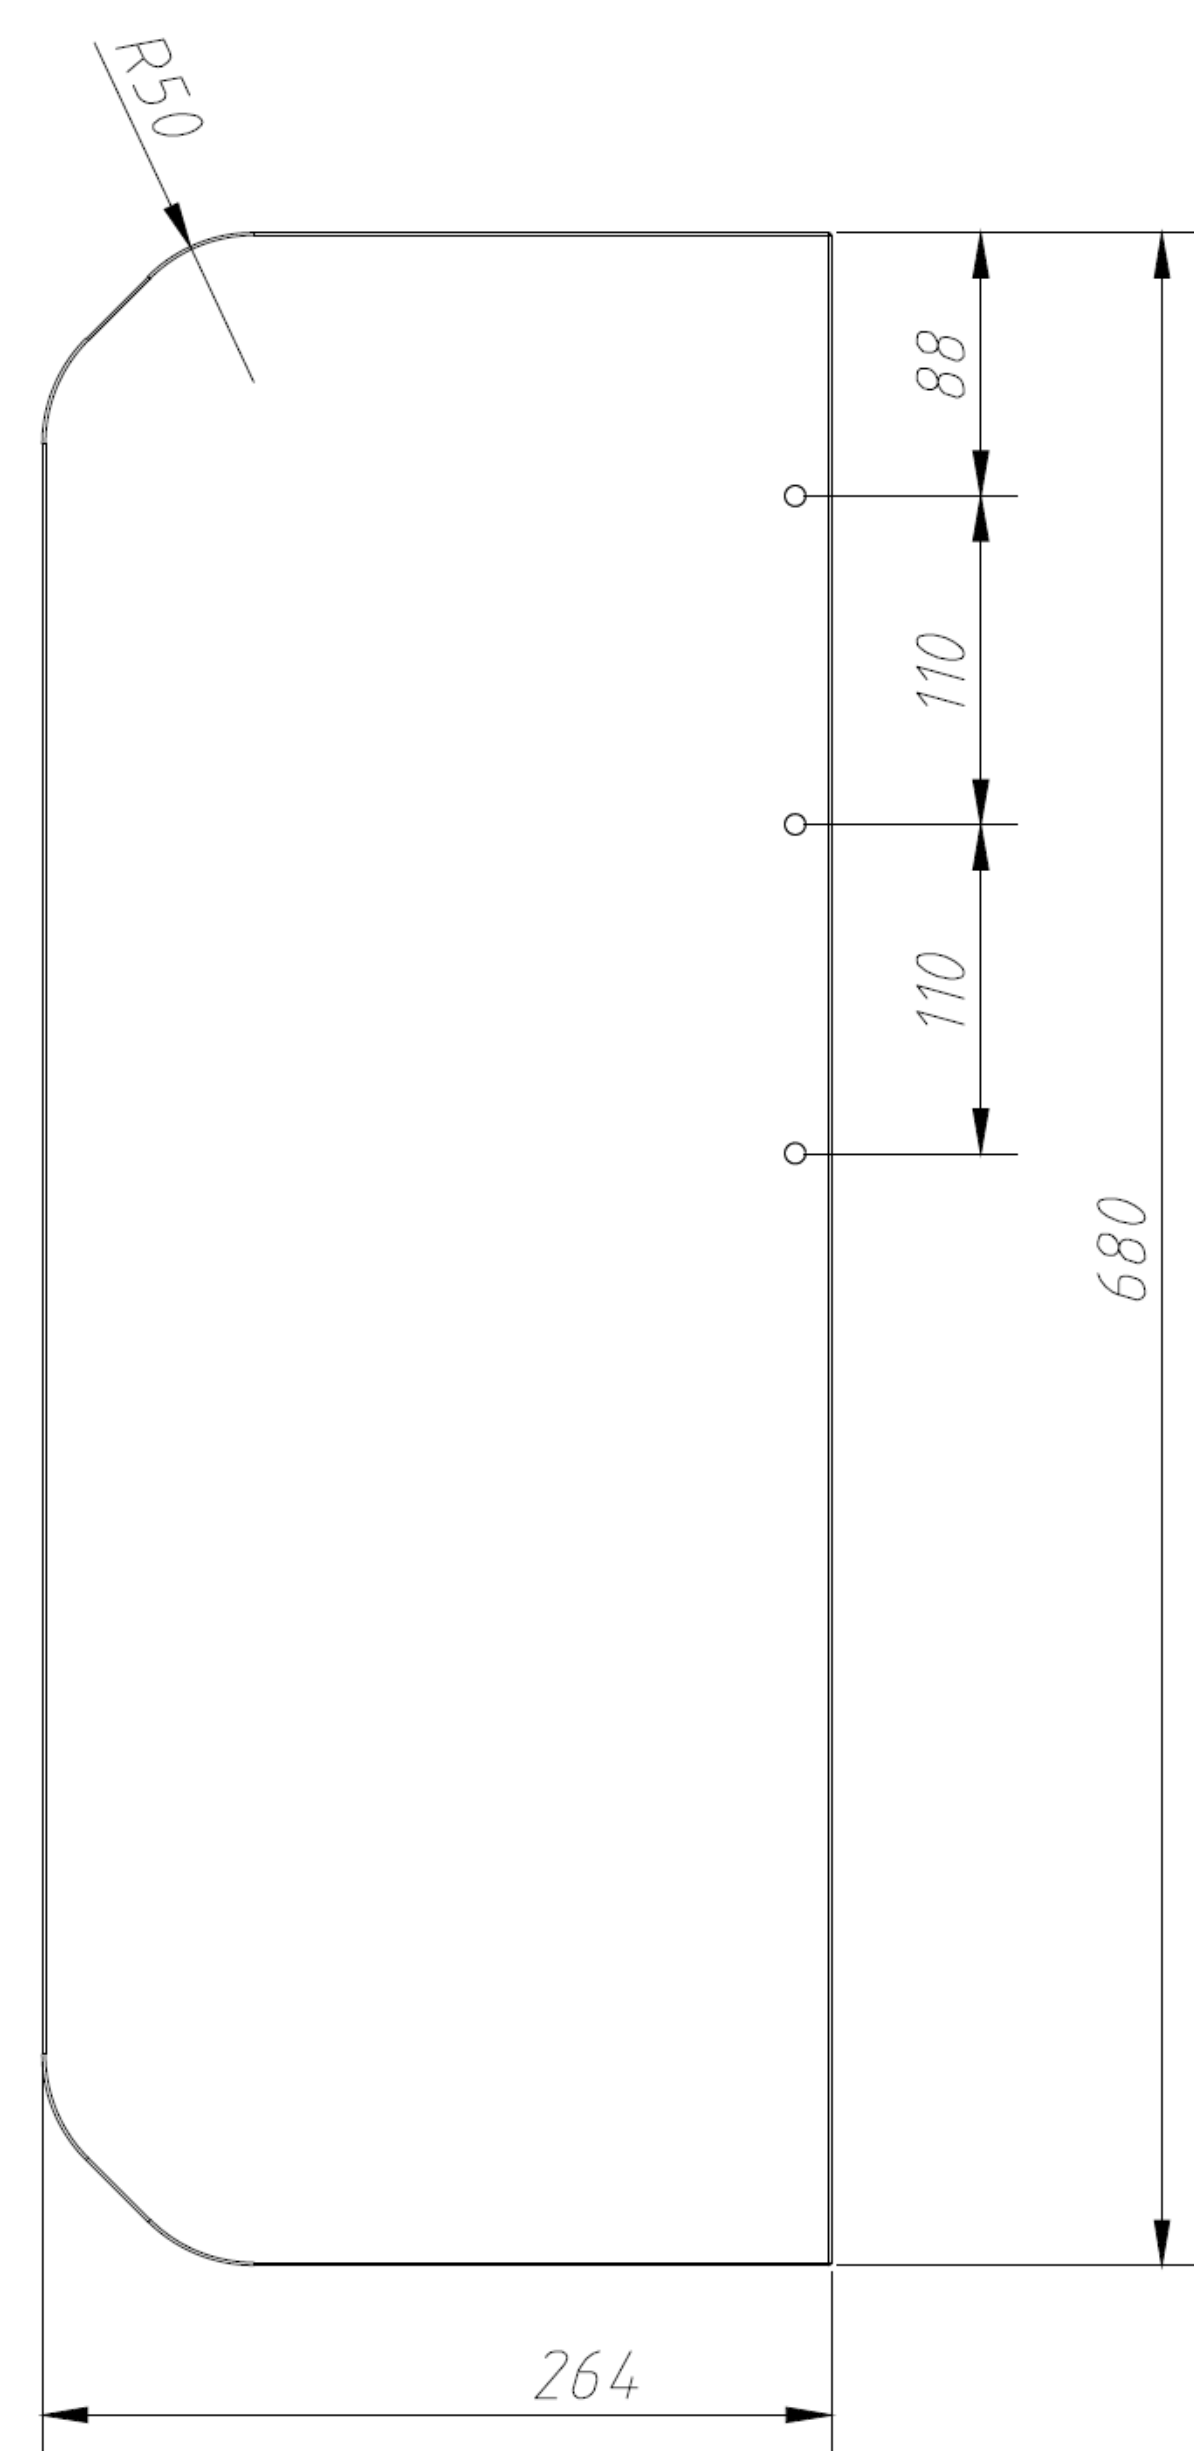


900 mm

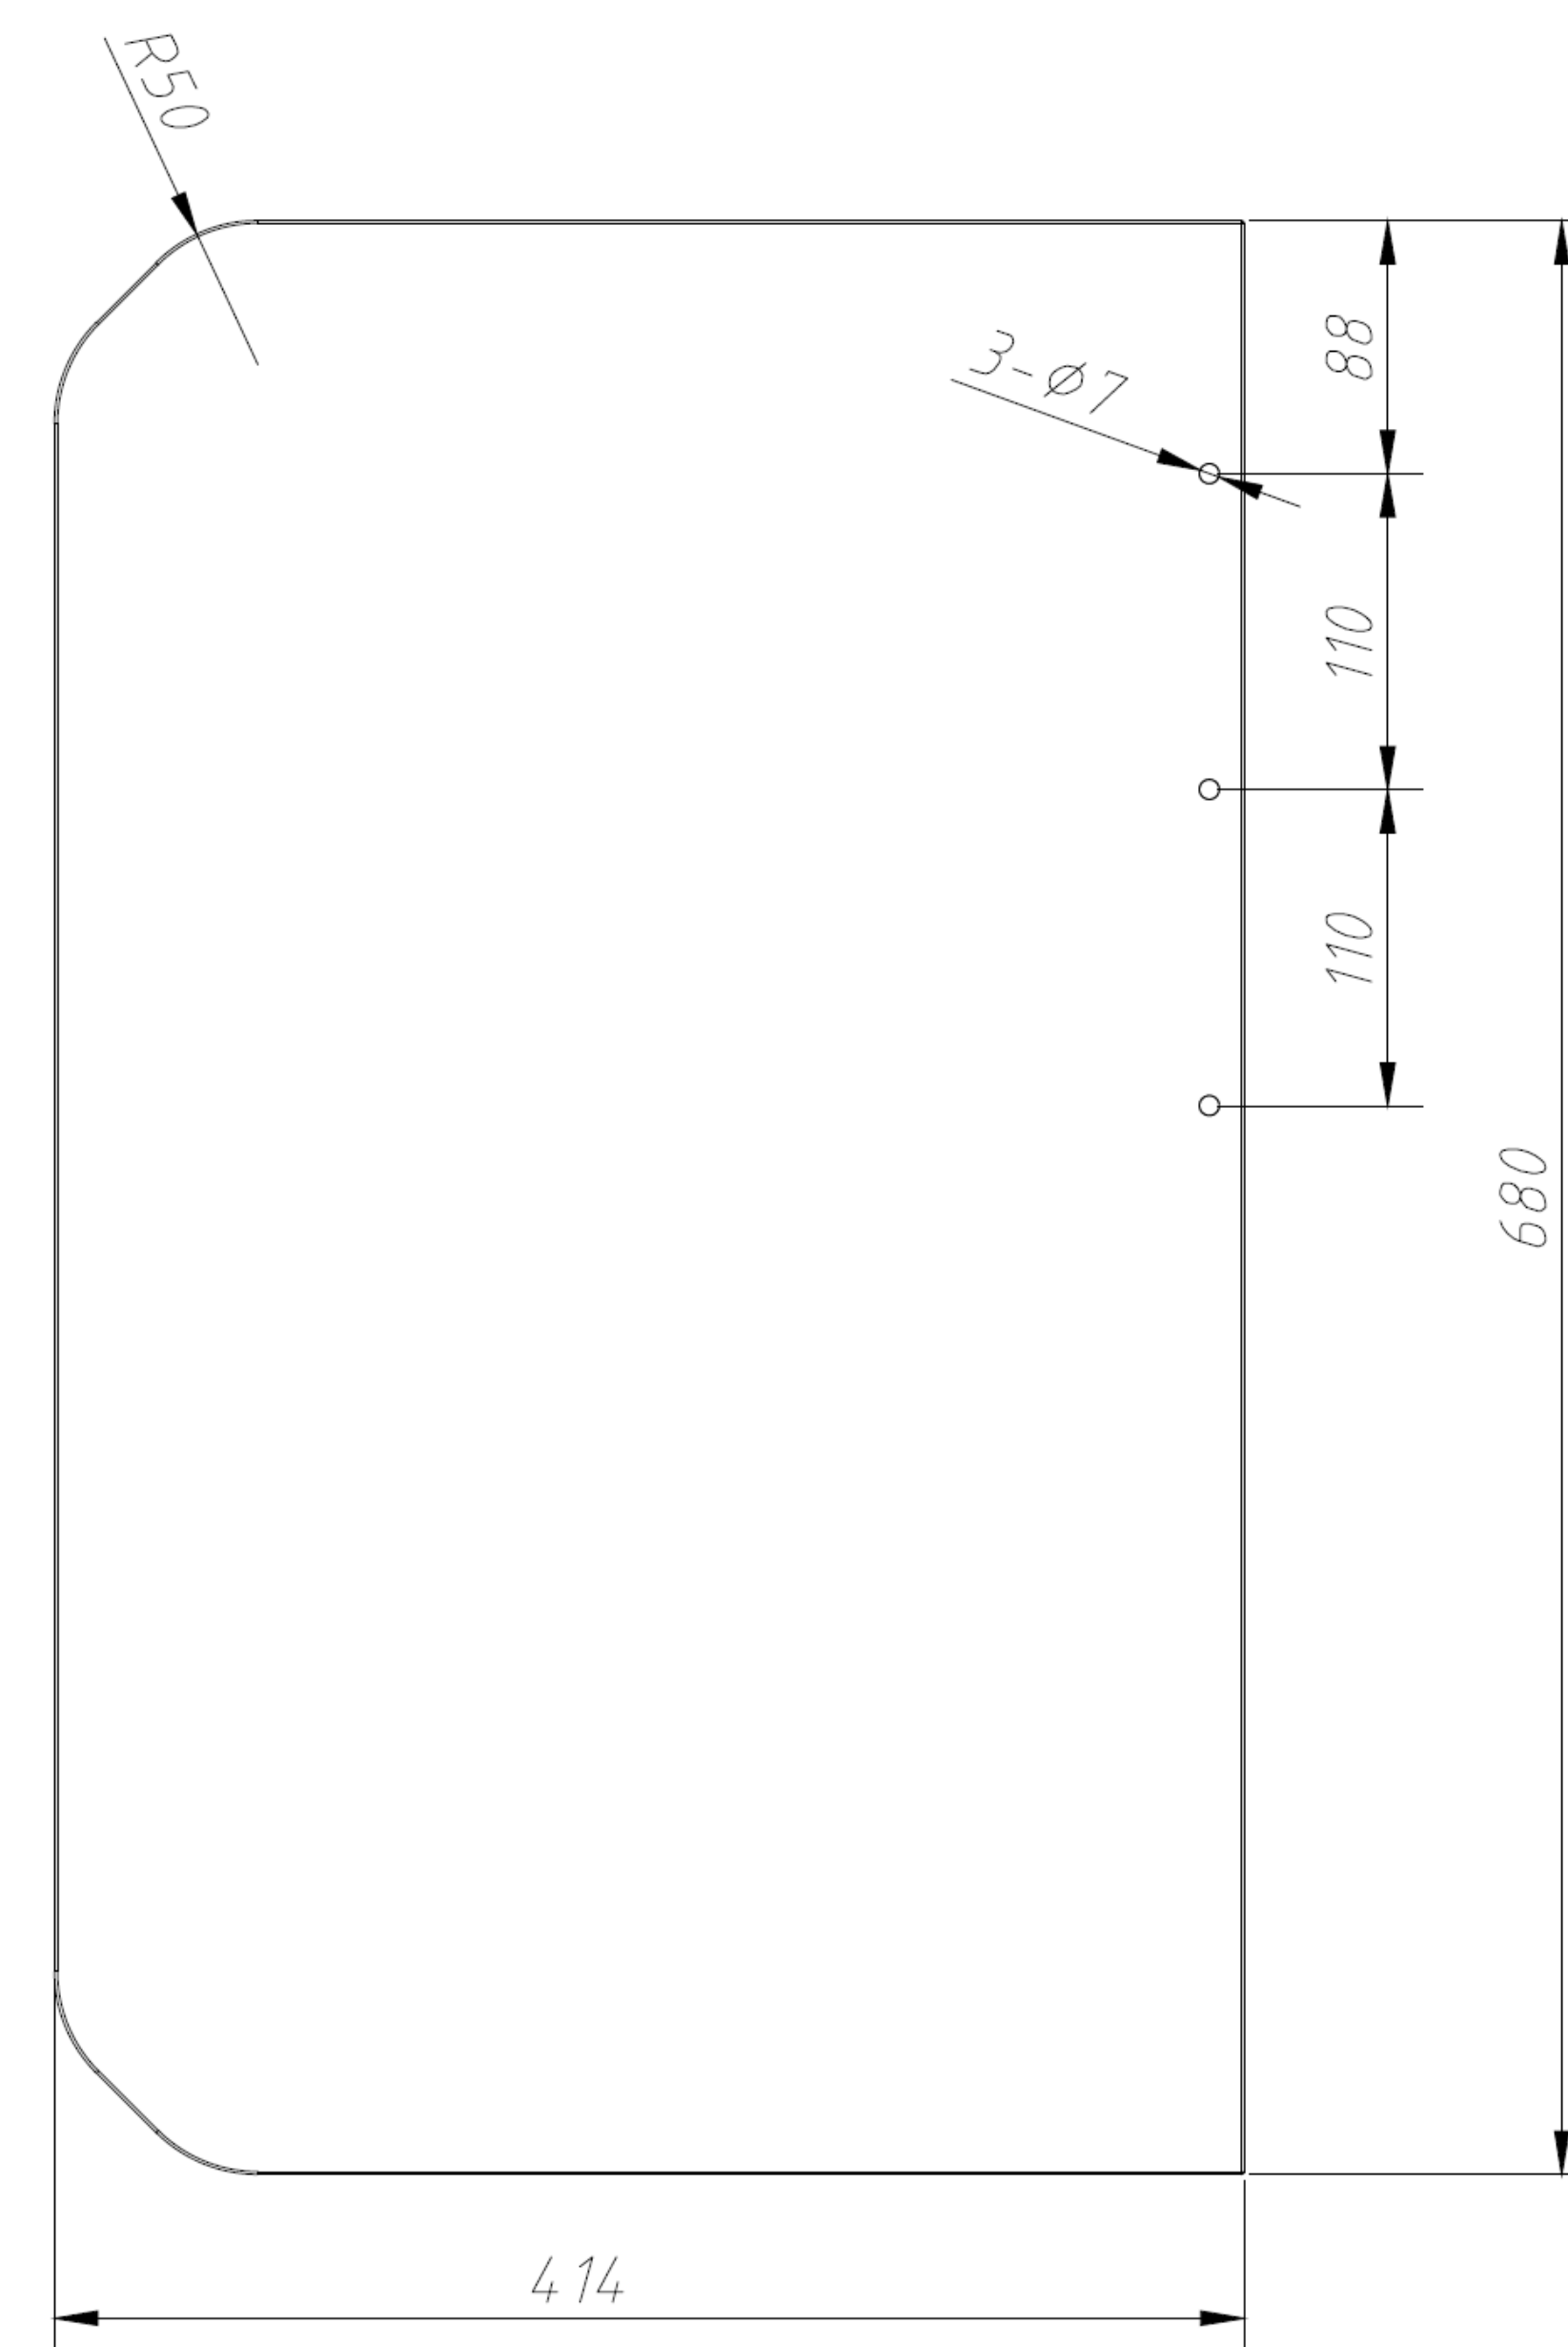

800 mm / 1500 mm

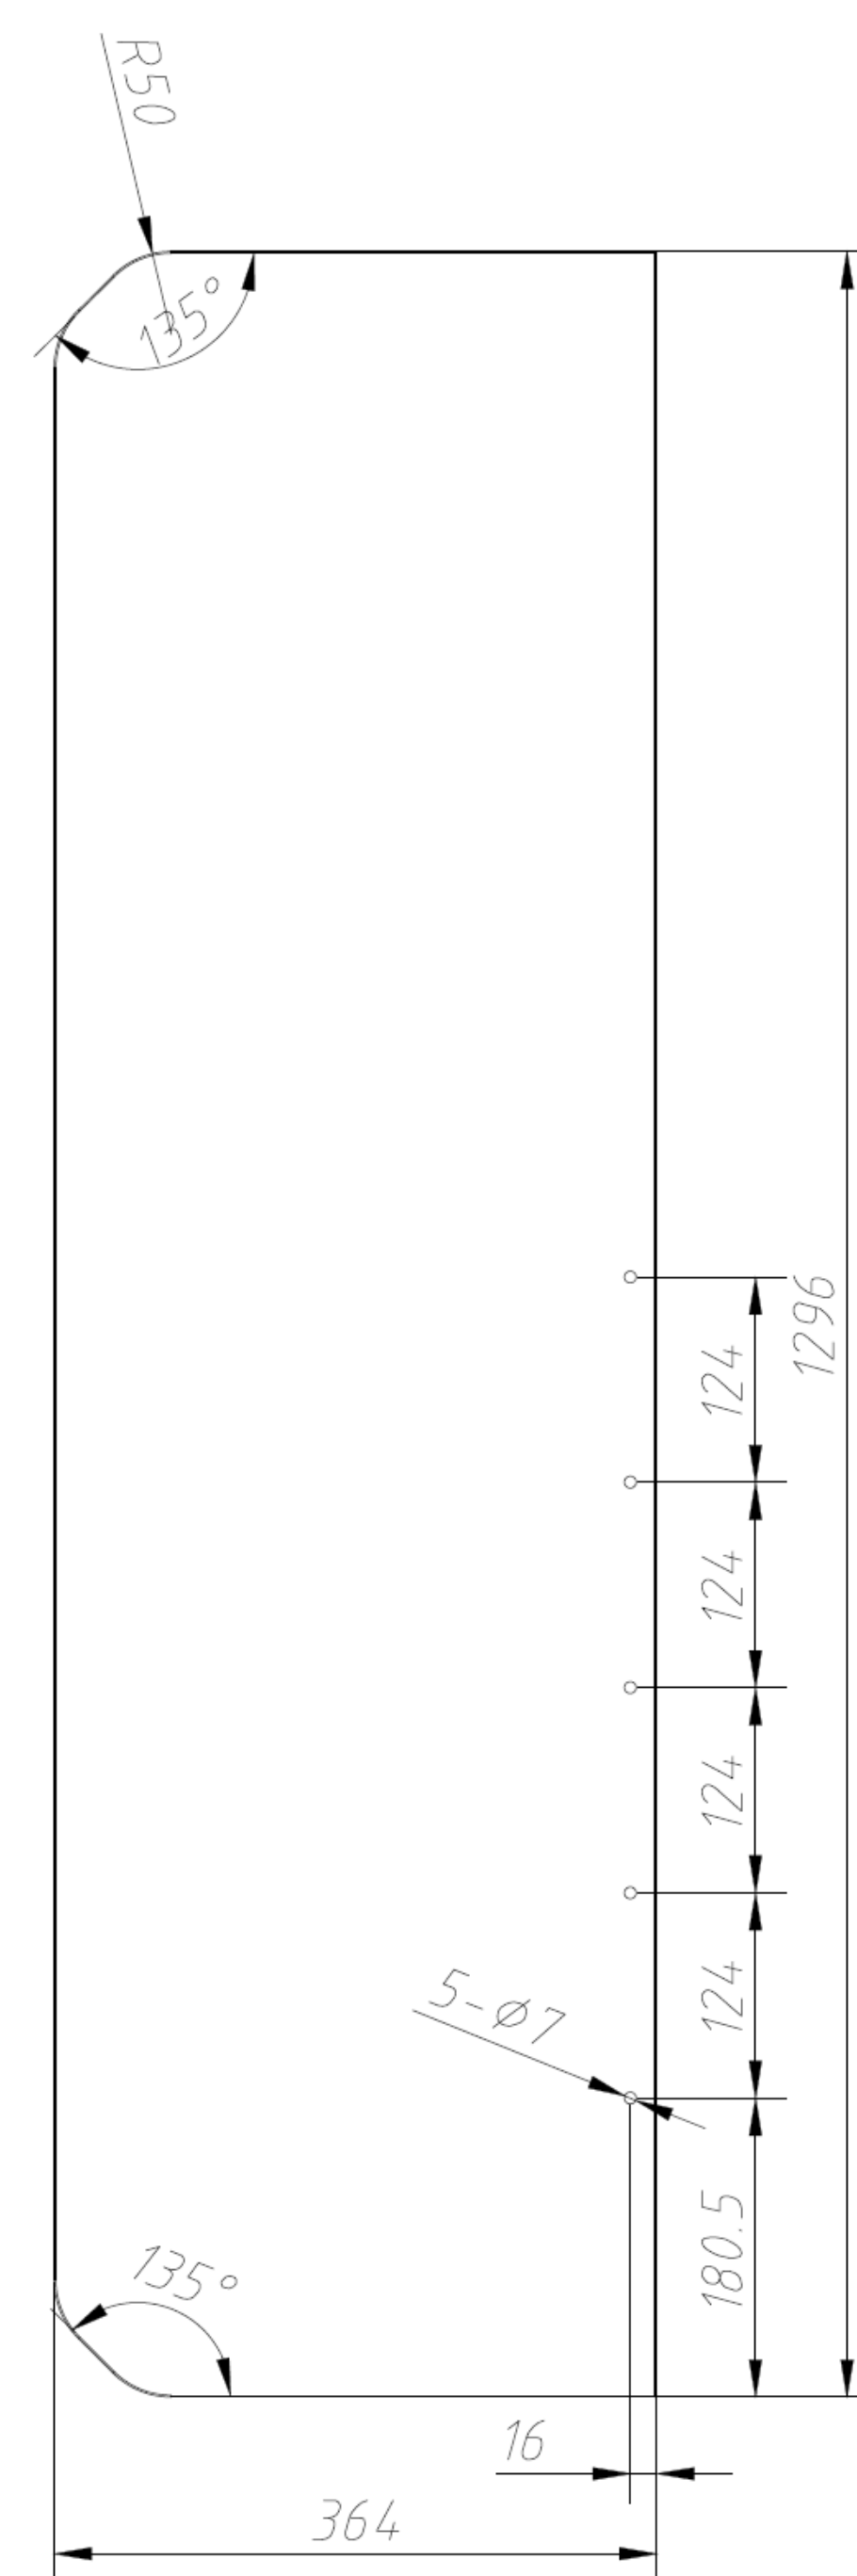

800 mm

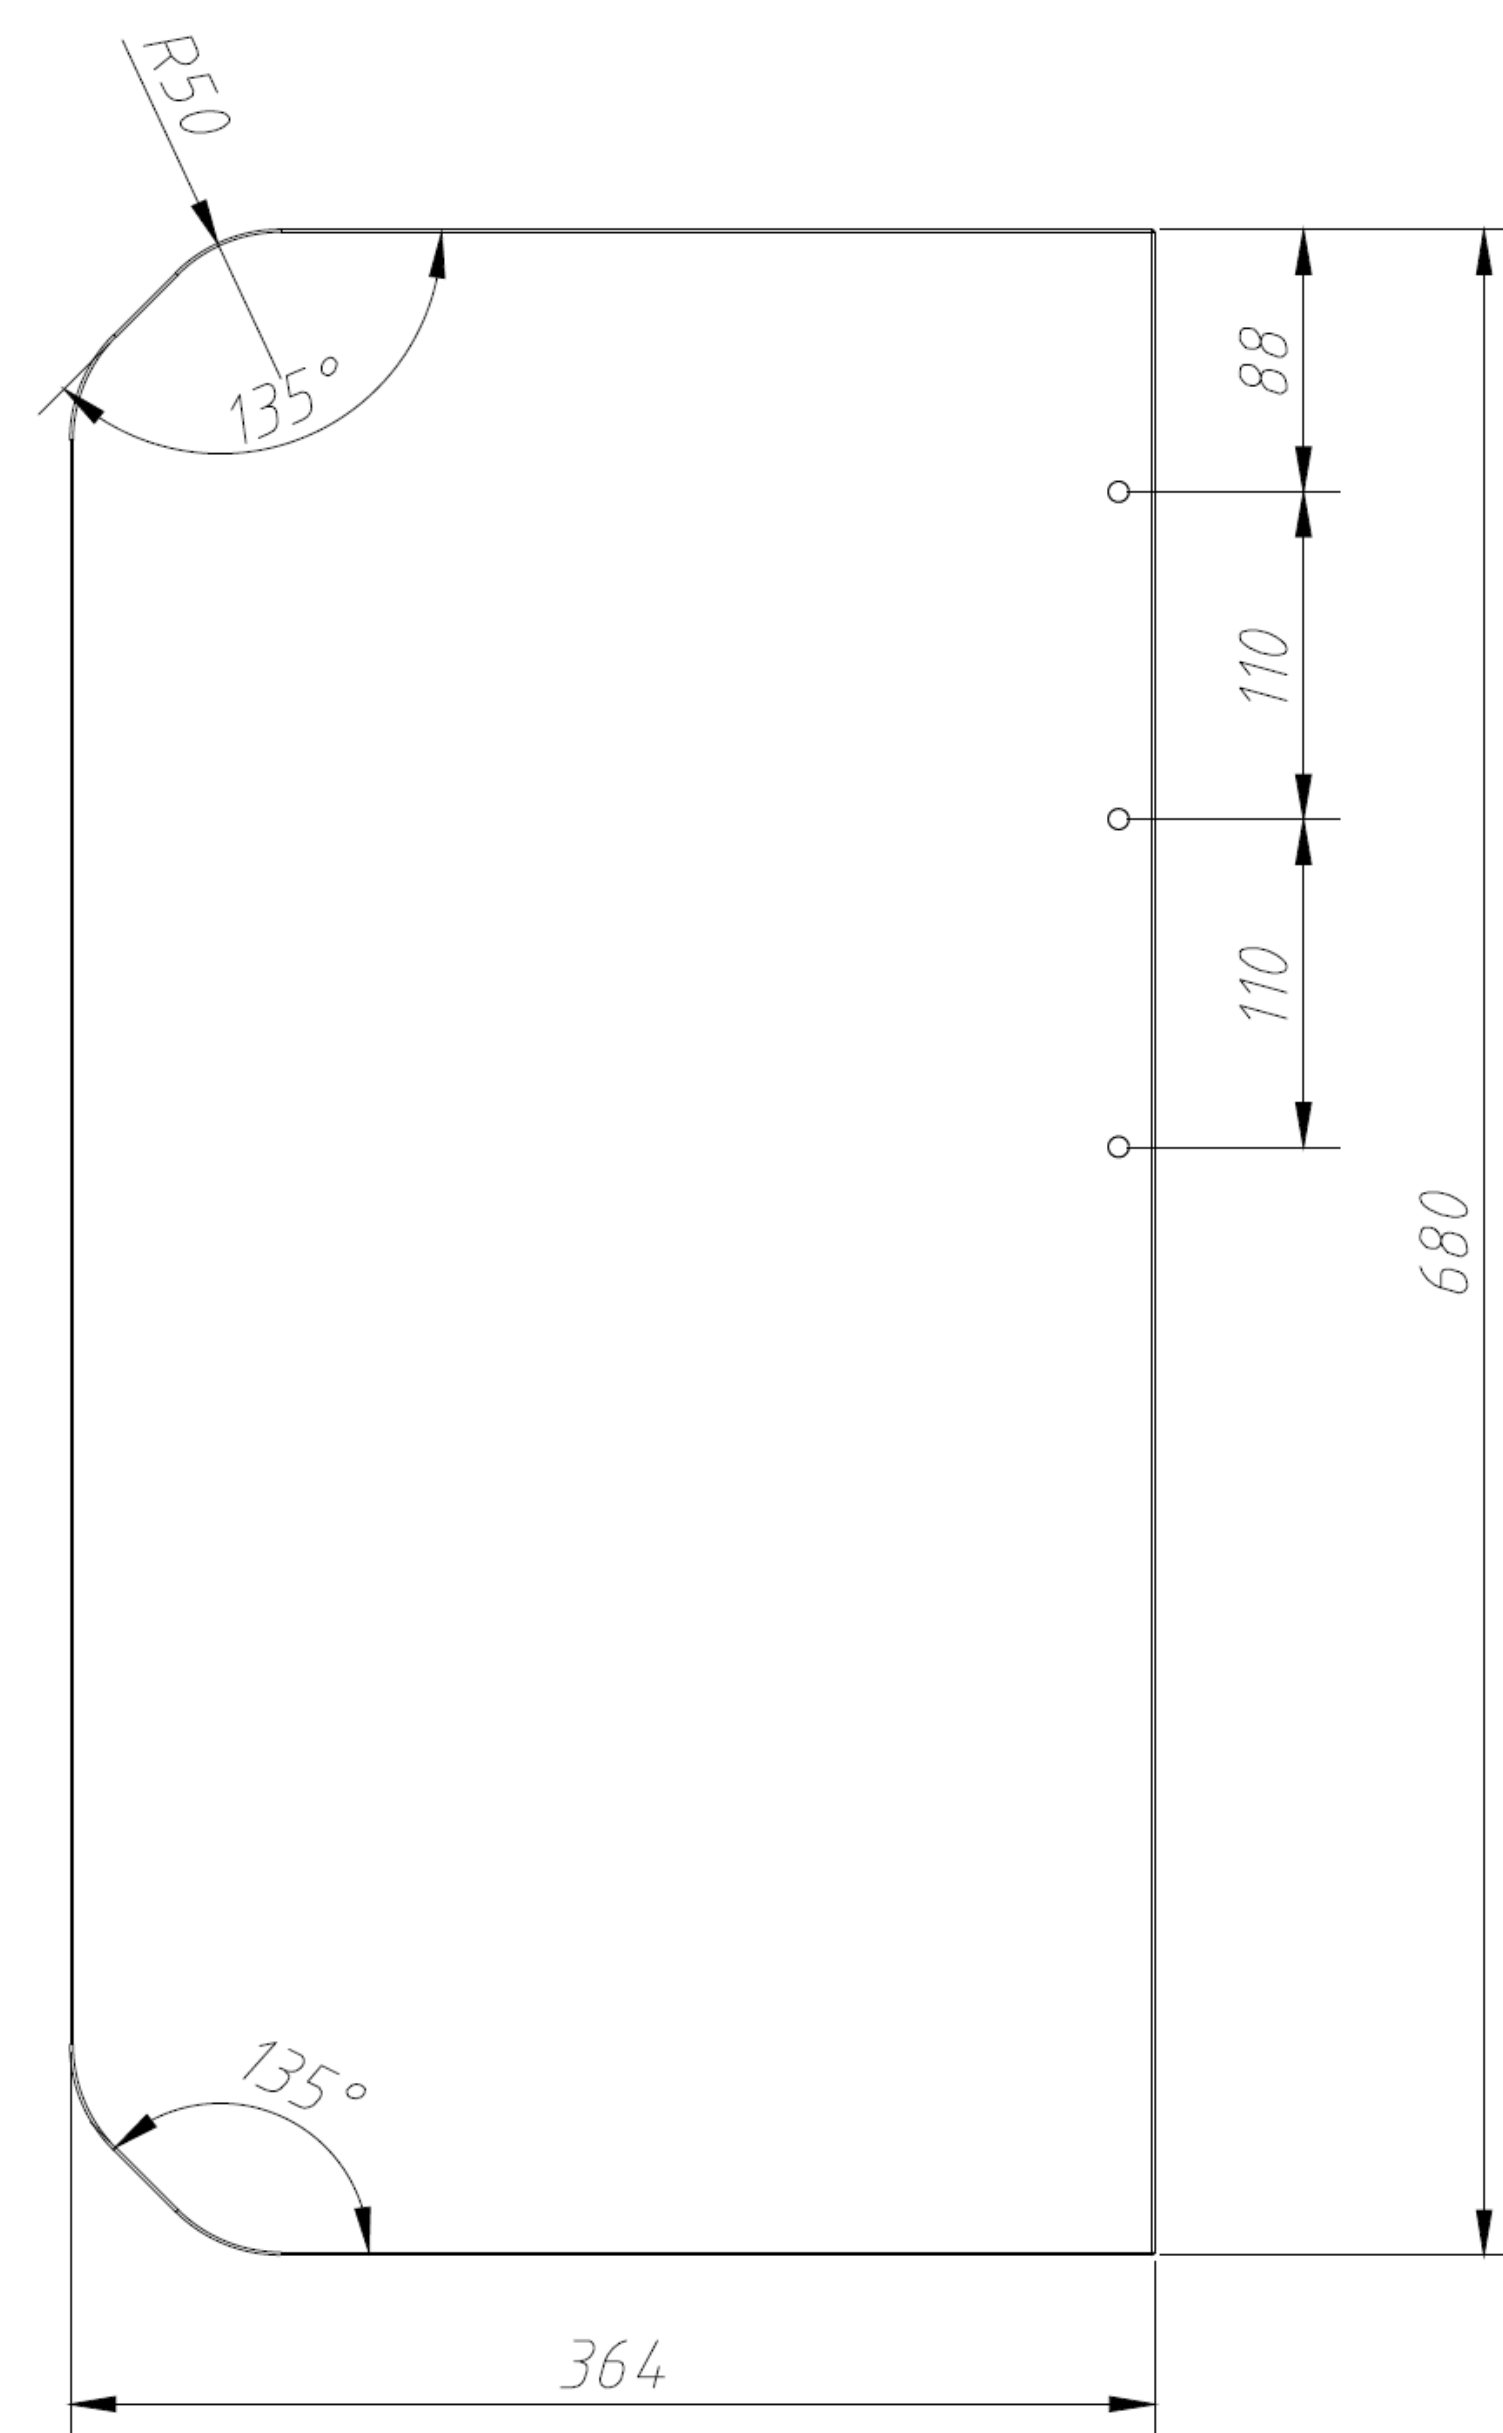

1200 mm

