
4G GPS Vehicle Camera

Brief introduction (1)

◆ 1、OPEN rear cover of IPC, insert TF card(Sandisk 256G Max.). Insert the SIM, copper pins face to mainboard, Nick side to inward, then fix it.

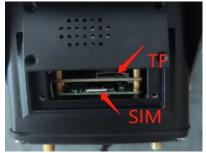


◆ 2、Fix the GPS and 4G antenna, GPS antenna face to sky and make sure without obstacle effecting signal.



♦ 3. Power up with DC 12-28V from vehicles, support extended cable, make sure waterproof at cable connection.



Brief introduction (2)

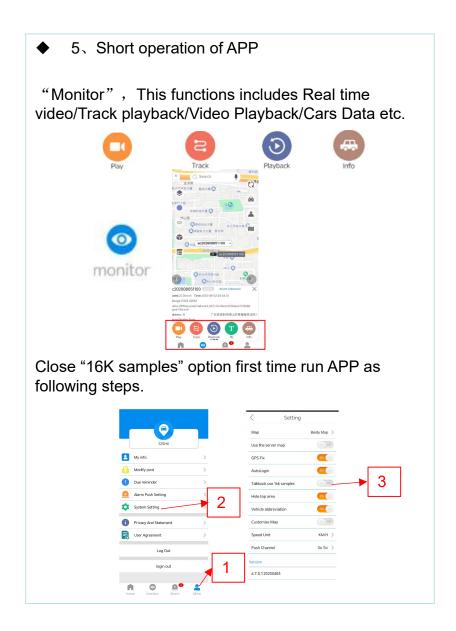

6. BNC connector could provide the analog images to vehicle small displayer. DC 12-28V input IPC ethernet setup **CVBS** output A> 4G camera networking diagram. Car Displayer 车载平台云服务器 **Parameters** Setup B> Wifi Camera networking diagram: Wifi AP MODE Camera2 4G IPC Camera3